


54-PZ Plastic, Double Chamber

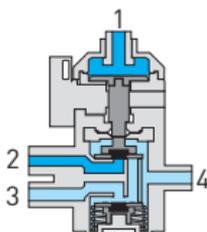


Connections

- 1 Command
- 2 Vent for N.O
Upstream for N.C
- 3 Upstream for N.O
Vent for N.C
- 4 Valve Control Chamber



Mode A:
Command-
Passage
Between
3 and 4

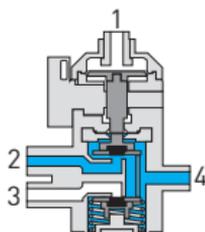


Mode B:
No Command-
Passage
Between
2 and 4

54-M Metal, Single Chamber




Connections

- 1 Upstream for N.O
Vent for N.C
- 2 Control Chamber
- 0 Vent for N.O
Upstream for N.C
- U Command

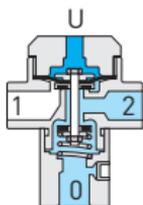

Mode A:
Command-
Passage
Between
0 and 2

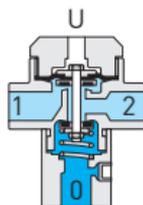

Mode B:
No Command-
Passage
Between
1 and 2

* N.O: with top spring (main valve closed)

* N.C: with bottom spring (main valve open)



54-PZ / 54-M

3-Way Hydraulic Relay Valves (3W-HRV)